



Quick Start Guide


- 1** Confirm all WiSA Certified speakers are plugged in to a wall outlet and ready to connect to your SoundSend

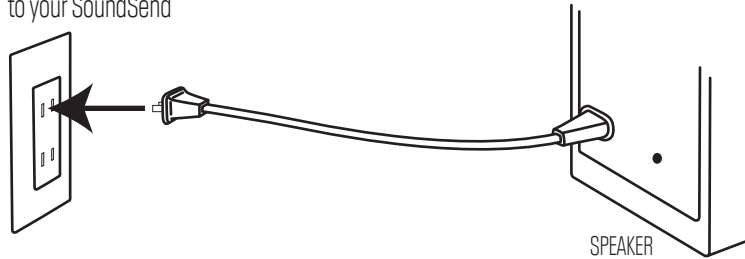

- 2** Connect your SoundSend to your TV's HDMI (ARC and/or eARC) port and to a wall outlet (cables included)

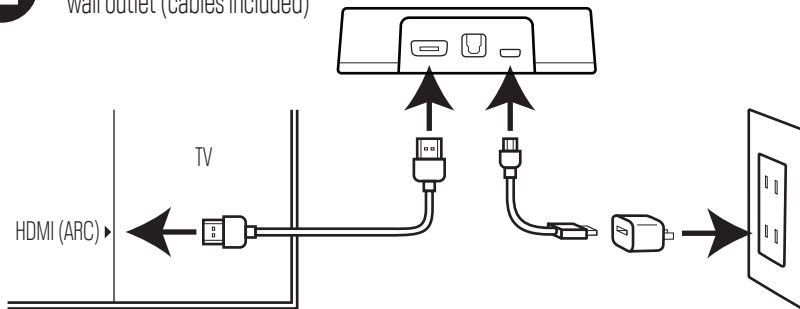

- 3** LED will pulse while connecting and then be solid when connections are confirmed

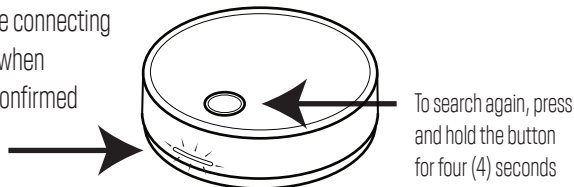

- 4** Make sure your TV's audio output is set to HDMI (ARC)
This should be found in the Sound or Audio settings of your TVs on screen menu.

Scan the code below for more help setting up your SoundSend system

